

A-WIT Technologies, Inc. PCB Manufacturing Rules File


Minimum Conductor Width




Minimum Clearance between Any Conductors (Wire, Pad, Via, SMD)

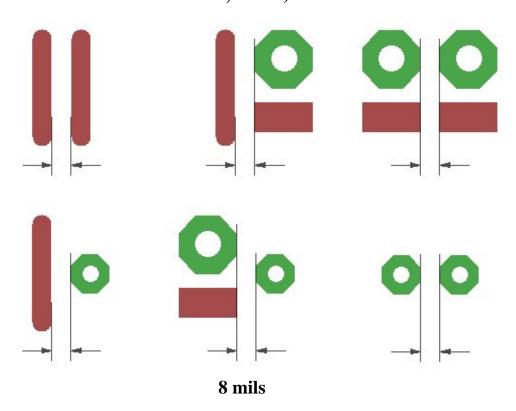


Minimum Distance between Conductor and Board Edge

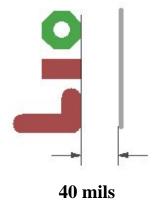


Minimum Diameter of Drills/Holes



Minimum Distance between Drills/Holes

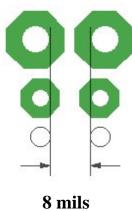

Stop and Cream Masks

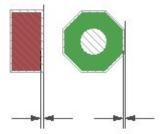

10%, minimum 0 mils, maximum 20 mils